


# NOTICE


## D'UTILISATION ET D'INSTALLATION

# TÉLÉCOMMANDE DIGITALE INFRAROUGE

BXERCIRDIMHA  
BXERCIRDIMHGA

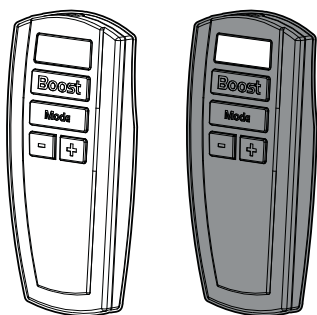


## NOMENCLATURE



x1

Télécommande



x1

Support mural



x2

Vis



x2

Chevilles



x2


Piles 1.5V LR6

## INSTALLATION DE LA TÉLÉCOMMANDE

### 1<sup>ÈRE</sup> MISE EN SERVICE


Tirez la languette située à l'arrière de la télécommande

La température de la pièce apparaît à l'écran, la télécommande est en fonctionnement.

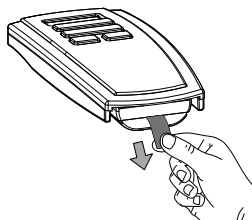

### FIXATION MURALE

1- Fixez le socle au mur (entraxe de 57 mm).

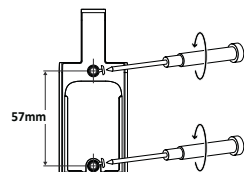


2- Glissez la télécommande dans le socle.



## FONCTIONNEMENT

### SYNOPTIQUE

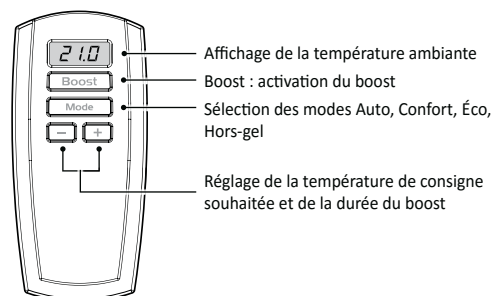


**Note :** les touches **Boost**, **Mode**, **+** et **-** ont les mêmes fonctions que les touches présentes sur l'appareil de chauffage à piloter. Reportez-vous à sa notice d'utilisation.

### UTILISATION

Orientez la télécommande vers la fenêtre de réception infrarouge de l'appareil.

Vérifiez à ce qu'il n'y ait aucun obstacle entre la télécommande et le récepteur infrarouge afin de ne pas perturber la transmission.

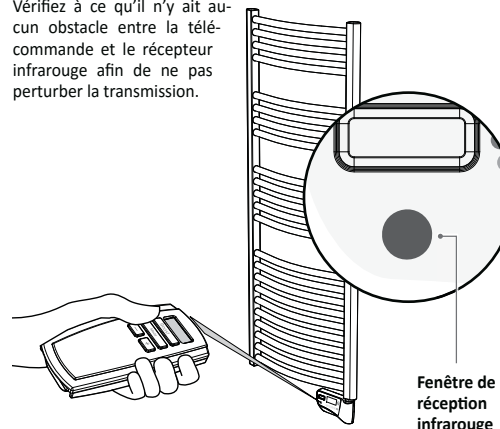

Fenêtre de réception infrarouge


### REPLACEMENT DES PILES

La télécommande possède un compartiment au dos où sont logées 2 piles 1.5V LR06. Leur autonomie est d'environ 2 ans, elle varie selon le mode d'utilisation. Elles doivent être remplacées par des piles 1.5V LR06 Alcaline uniquement.




Après changement, pensez à jeter vos piles usagées dans les bacs de recyclage prévus à cet effet.


1- Dévissez la trappe à piles située à l'arrière de la télécommande.

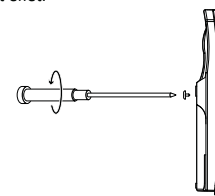

2- Retirez les piles usagées et insérez les nouvelles piles dans la télécommande. Toute inversion de polarité des piles n'entraînera qu'un dysfonctionnement sans pour autant endommager le produit.

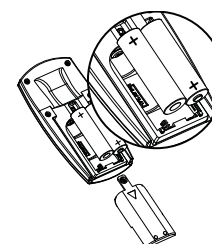

3- Remettez la trappe à pile en place et revissez la vis située à l'arrière de la télécommande.

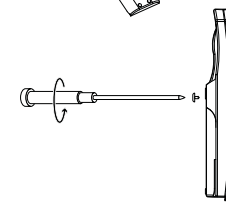

## QUE FAIRE EN CAS DE PROBLÈMES

L'appui sur l'une de ses touches est sans effet :

- Changez les 2 piles.
- Vérifiez qu'il n'y ait aucun obstacle entre la télécommande et le récepteur infrarouge pouvant perturber la transmission.
- Orientez la télécommande vers le récepteur infrarouge (voir Utilisation).
- Rapprochez la télécommande du récepteur infrarouge.

## CARACTÉRISTIQUES TECHNIQUES

**Caractéristiques générales :**

- Alimentation 2 piles Alcalines LR6 1,5V.
- Durée de vie typique : 2 ans.
- Réglage de la température de consigne de +10°C à +30°C environ.
- Portée d'émission : 3 mètres environ.

**Environnement :**

- IP20.
- Température de fonctionnement : 0°C à +50°C.
- Température de stockage : -10°C à +70°C.
- Humidité : 90% à +40°C (sans condensation).

**Constructeur :** IMHOTEP Création (contact@imhotepcreation.com).

**Déclaration de conformité européenne :** Nous déclarons sous notre seule responsabilité que les produits présentés dans cette notice satisfont à toutes les exigences essentielles des directives et normes harmonisées suivantes :

- CEM 2014/30/EU: EN60730-1/ EN60730-2-9
  - ROHS 2011/65/EU: EN50581
- et sont fabriqués suivant des processus certifiés ISO 9001 V2015.




Le symbole,  apposé sur le produit, indique l'obligation de le retourner, en fin de vie, à un point de collecte spécialisé, conformément à la directive DEEE 2012/19/UE. En cas de remplacement, vous pouvez également le retourner à votre distributeur. En effet, ce produit n'est pas un déchet ménager ordinaire. Gérer ainsi la fin de vie, nous permet de préserver notre environnement, de limiter l'utilisation des ressources naturelles.


# INSTALLATION AND OPERATING INSTRUCTIONS

## INFRARED DIGITAL REMOTE CONTROL

BXERCIRDIMHA  
BXERCIRDIMHGA

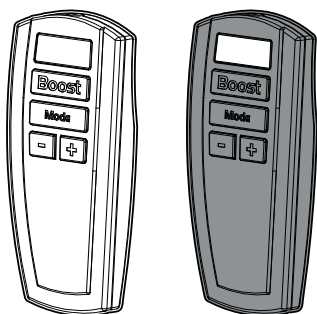


## PACK CONTAINS



x1

Remote control



x1

Wall mount




x2

Anchors



x2

Screws




x2

Batteries 1.5V LR6

## INSTALLING THE REMOTE CONTROL

### FIRST COMMISSIONING


Pull on the suction located at the back of the remote control.

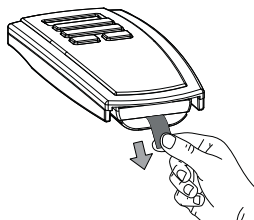

Ambient temperature is displayed, the remote control is on.


### WALL MOUNTING

- 1- Fix the base into the wall (centre distance of 57mm).
- 2- Slide the remote control in the base.

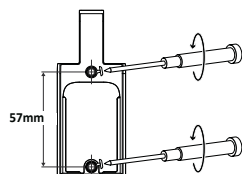

## OPERATING

### OVERVIEW

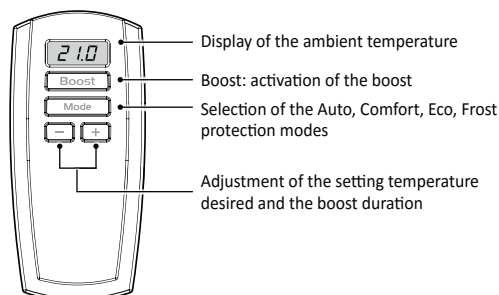


**Note:** the buttons **Boost**, **Mode**, **+** and **-** have the same features as the buttons on the heating appliance to be remotely controlled. Please refer to its user guide.

### USING

Position the remote control towards the infrared receiving window of the device.

Check that there is no obstacle between the remote control and the infrared receiver to disturb the transmission.

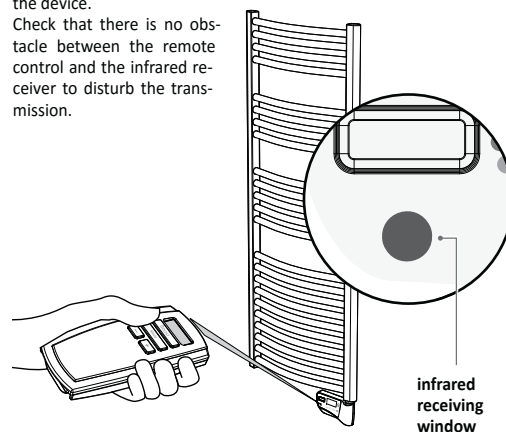

### REPLACING BATTERIES


2 batteries 1.5V LR06 are located in the compartment at the back of the remote control. Battery life of 2 years, it varies according to the mode of use.

They must be replaced by 1.5V LR06 batteries, Alkaline only.




Remember to take used batteries to battery collection points so they can be recycled.


- 1- Unscrew the batteries cover located at the back of the remote control.

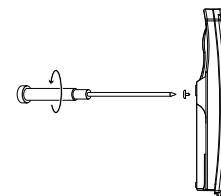

- 2- Remove the old batteries and insert the new batteries in the remote control. Please check polarity of batteries before insertion.

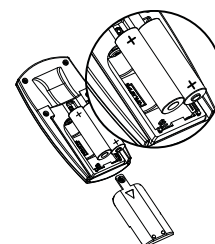

- 3- Put back the batteries cover and screw back on the remote control.

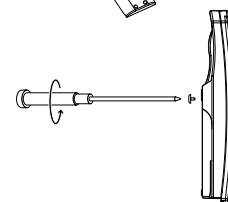

## TROUBLESHOOTING

**Pressing a key on the keypad has no effect:**

- Change the 2 batteries.
- Check there is no obstacle between the remote control and the infrared receiver to disturb the transmission.
- Position the remote control toward the infrared receiver (see Using).
- Bring the remote control closer to the infrared receiver.

## TECHNICAL SPECIFICATIONS

### General specifications

- Power supply 2 alkaline batteries LR6 1.5V
- Typical lifetime: 2 years
- Adjustment of the setting temperature from +10°C to +30°C around
- Emission range: around 3 meters

### Environment

- IP20
- Operating temperature: 0°C to 50°C
- Storage temperature: -10°C to +70°C
- Humidity: 90% to +40°C (without condensation)

### Manufactured by:

IMHOTEP création (contact@imhotepcreation.com).

### Compliance statement:

We hereby declare under our sole responsibility that the products described in these instructions comply with the provisions of Directives and harmonized standards listed below:

- EMC 2014/30/EU: EN60730-1/ EN60730-2-9
- ROHS 2011/65/EU : EN50581

and are manufactured using processes which are certified ISO 9001 V2015.



The symbol  affixed on the product indicates that you must dispose of it at the end of its useful life at a special recycling point, in accordance with European Directive WEEE 2012/19/EU. If you are replacing it, you can also return it to the retailer from which you buy the replacement equipment. Thus, it is not ordinary household waste. Recycling products enables us to protect the environment and to use less natural resources.